


INSTALLATION

- Install the handlebars with the punched mark aligned with the handlebar clamp as shown.




- The gap (A) between the handlebar clamps should be even.

 **Handlebar clamp bolt: 23 N·m (2.3 kgf·m, 16.5 lb-ft)**

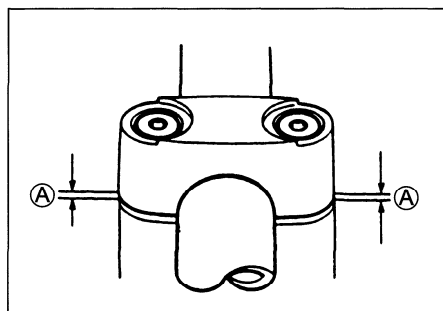

- Install the following items to the right handlebar.


- ① Front brake master cylinder/reservoir
- ② Throttle grip
- ③ Handlebar balancer
- ④ Throttle cables
- ⑤ Right handlebar switch
- ⑥ Rear view mirror

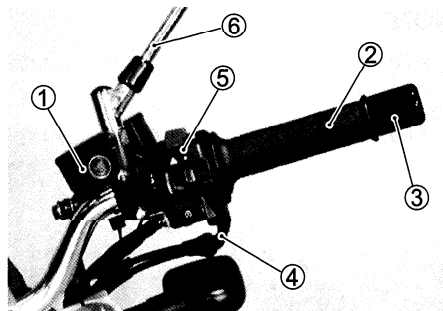**NOTE:**

* Apply grease to the throttle cable and the cable drum.

 **99000-25030: SUZUKI SUPER GREASE "A"**

* Align the portion (A) of the right handlebar switch with the hole (B) of the handlebar.

* Adjust the throttle cable play. ( 2-16)

